




# Sony Cyber-shot DSC-W800 Motherboard Replacement

Replace the malfunctioning Motherboard on your Sony Cyber-shot DSC W800. This should restore your device to its default operating condition.

Written By: Thomas Campo

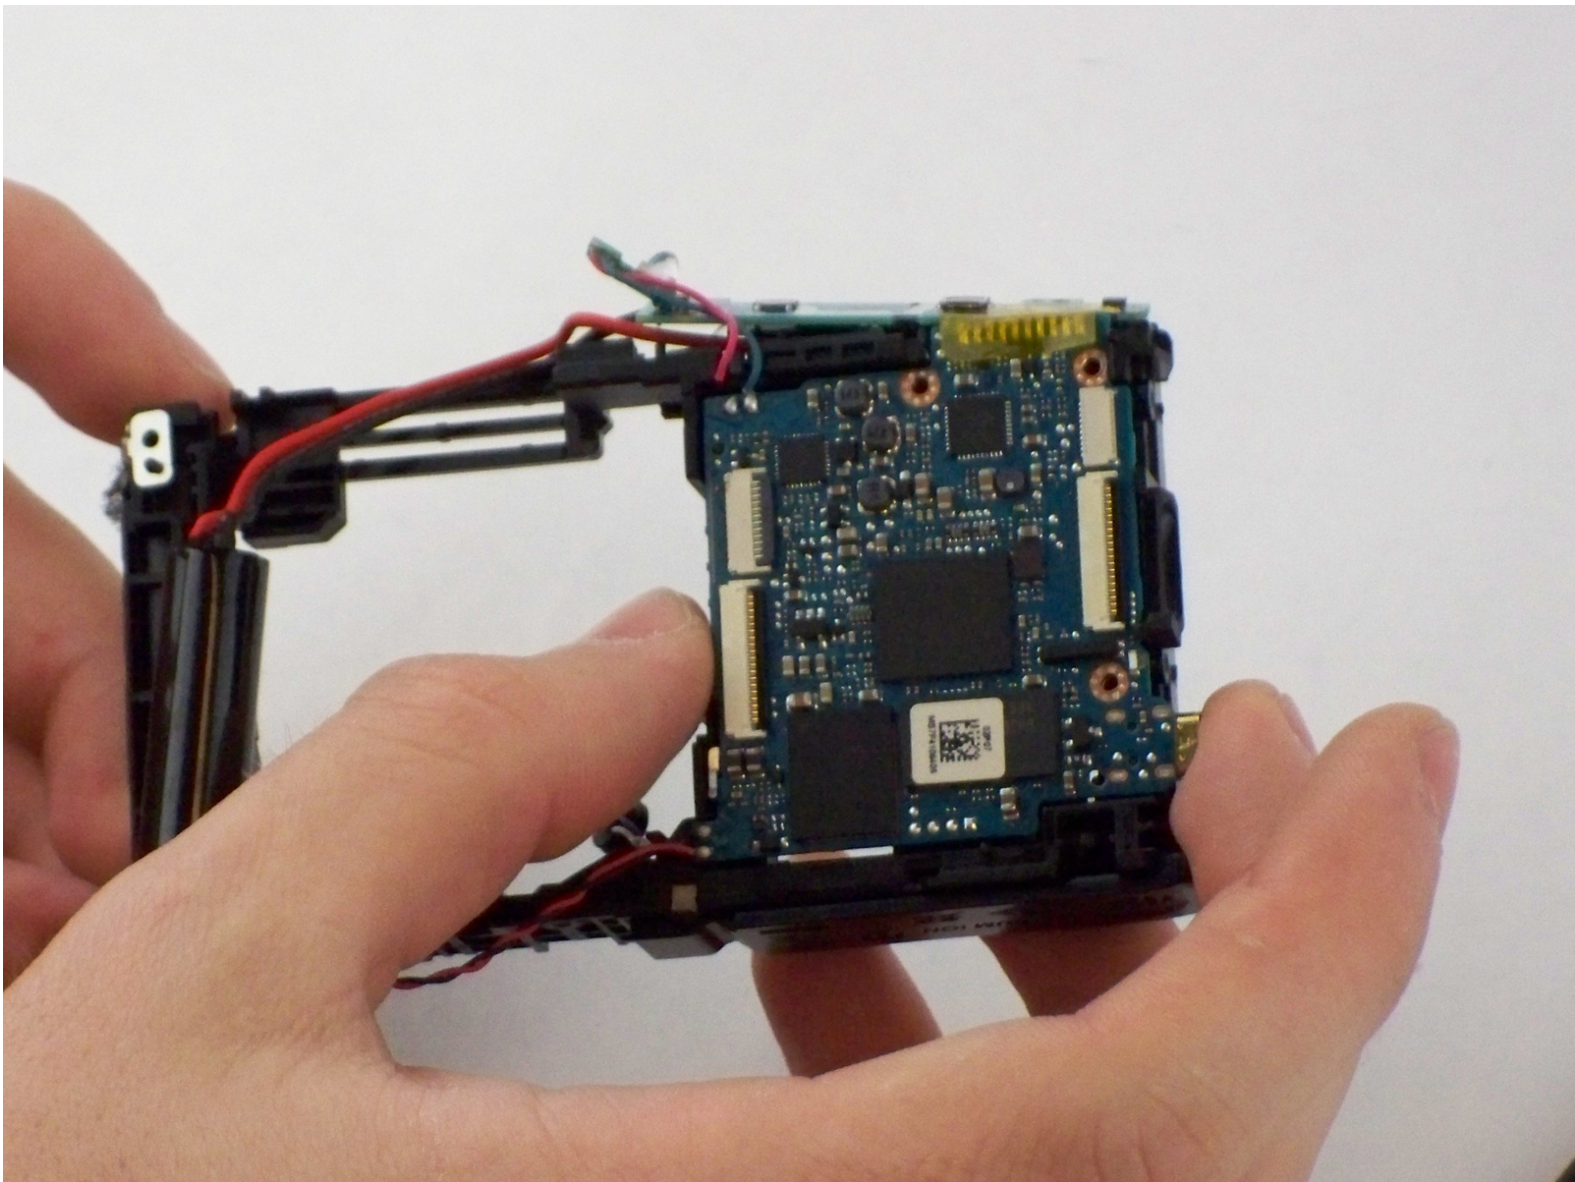

## INTRODUCTION

Some things to consider before you work on the Sony Cyber-shot DSC W800 to replace the Motherboard:


- The Motherboard is an integral part of the device and any improper handling can cause issues in other parts of the camera.
- Be cautious when removing ribbon wires.
- Be sure to keep track of all pieces that are taken apart.



### TOOLS:


- [Phillips #000 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Button Board

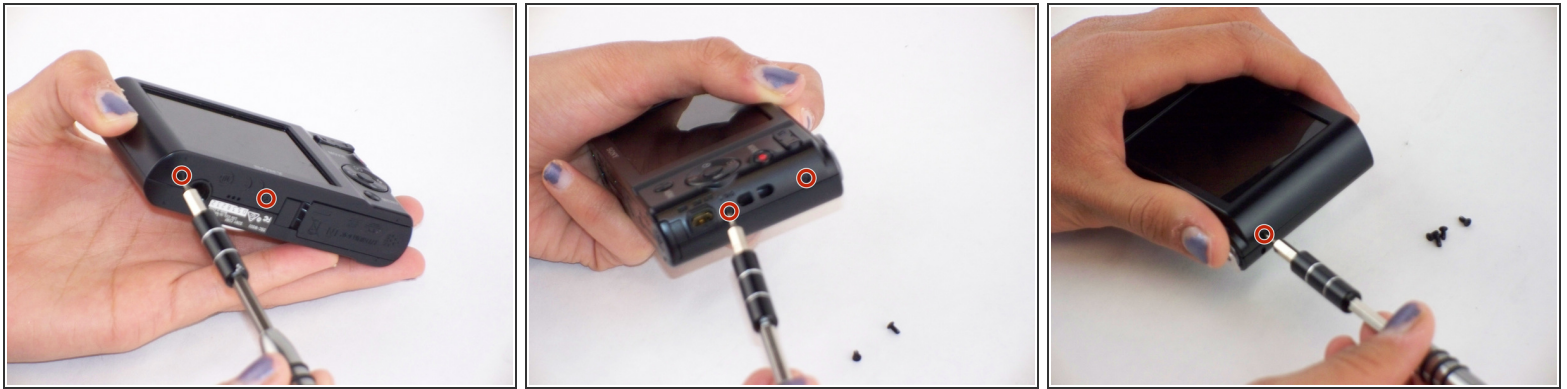

- Remove the five 4.0 mm Phillips #000 screws on the back panel.


## Step 2

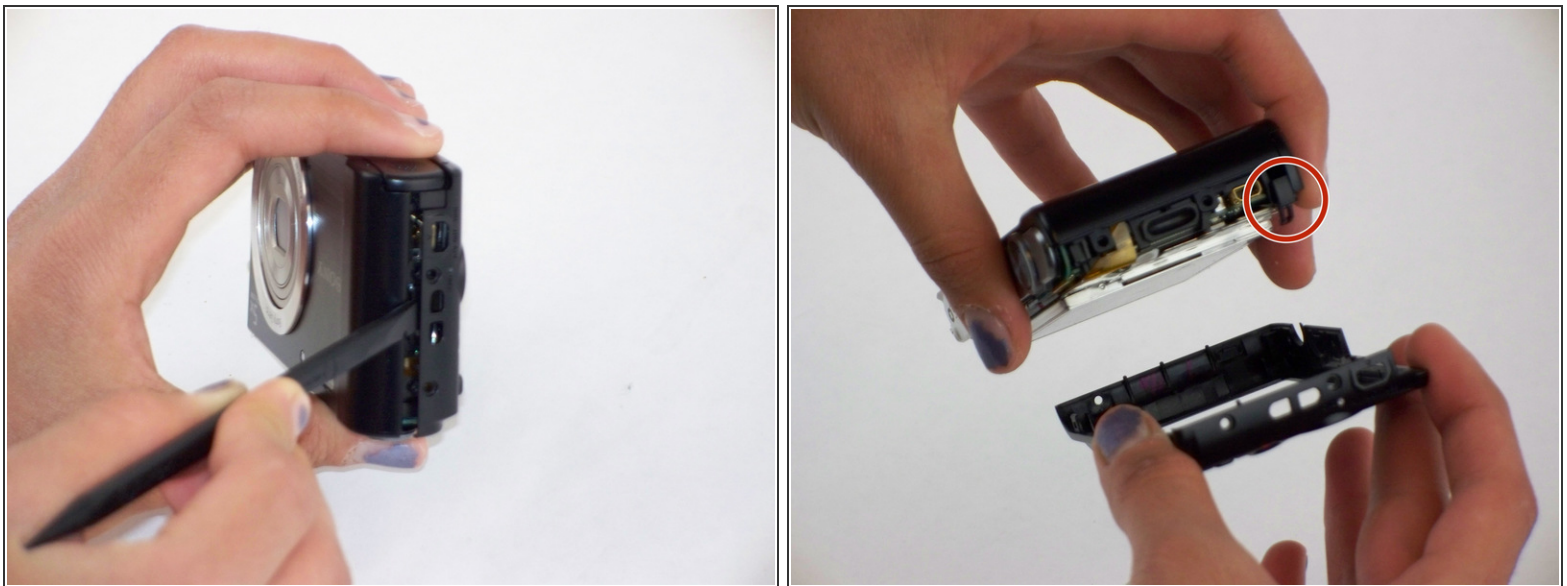

- Using the Spudger, remove the back panel from the device.
- The loose piece circled in the picture will most likely fall off the camera housing.




## Step 3

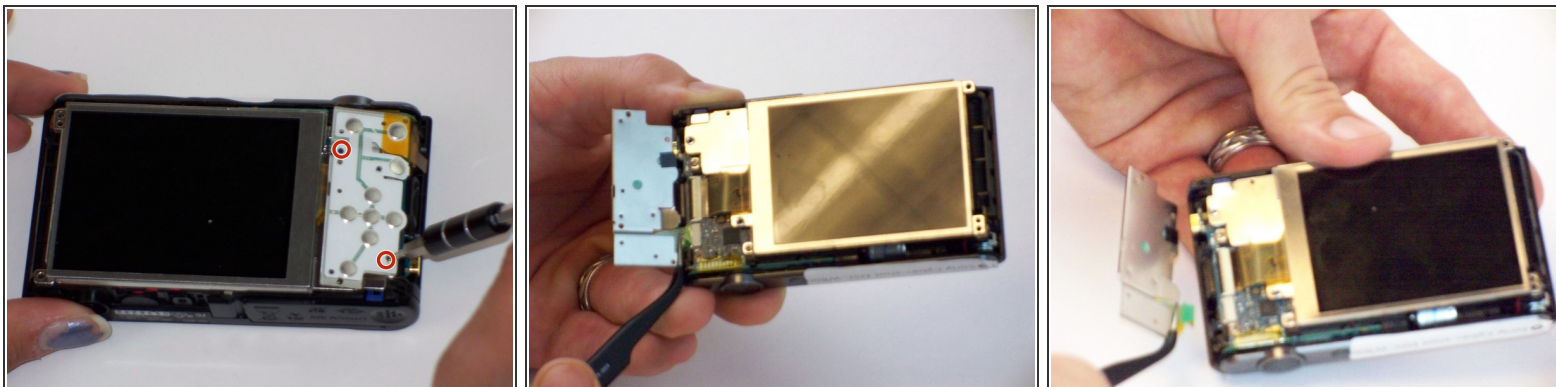

- Remove the two 2.15mm Phillips #000 screws from the circuit board.
- Gently pull on the ribbon wire from ZIF connector with the tweezers to remove the button board.


⚠ Ribbon wires can easily be damaged.

## Step 4 — LCD Screen

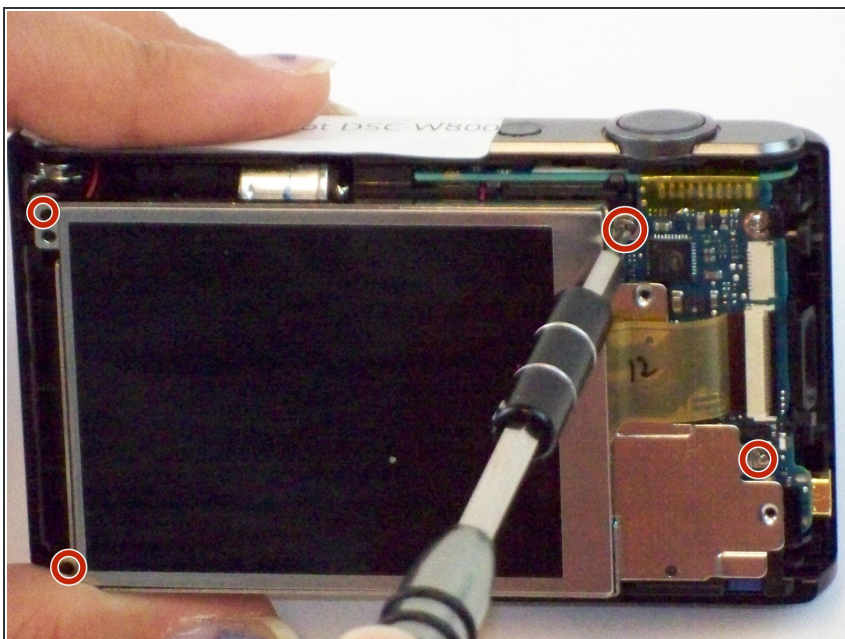



- Remove the four 3.75 mm Phillips #000 screws from the LCD back panel.

## Step 5

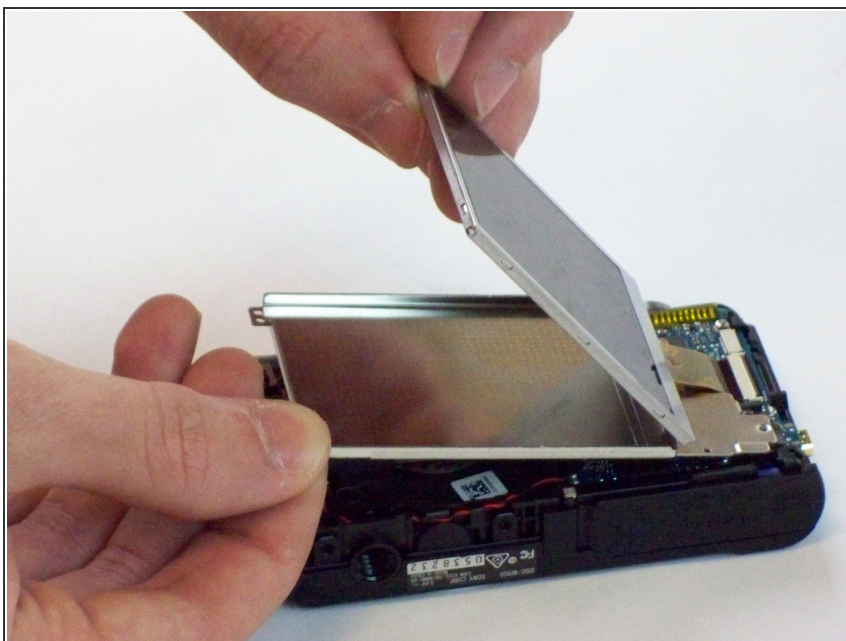

- Lift the back panel and separate the LCD Screen by prying it up.
- Remove the back panel.

## Step 6

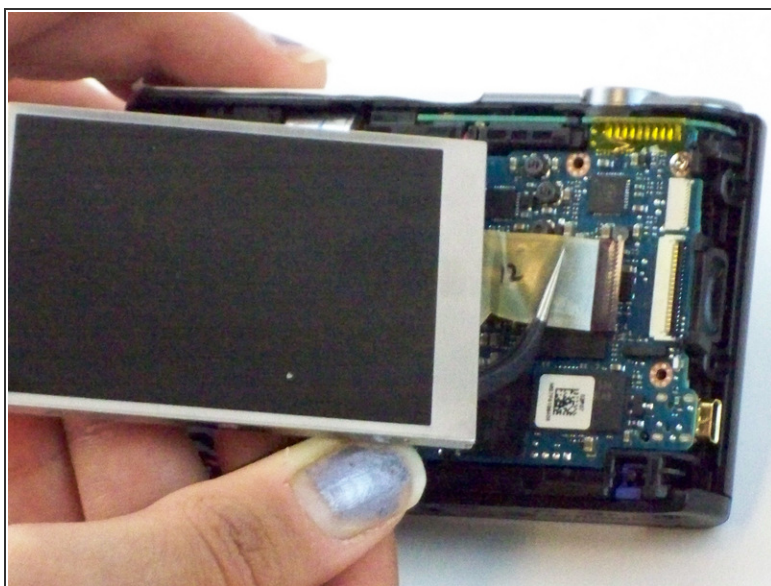
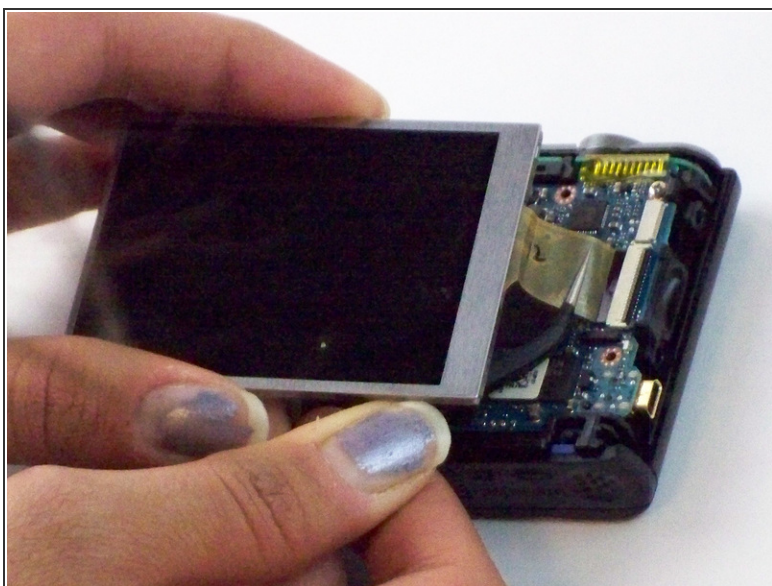


- Gently pull on the ribbon wire disconnecting from the ZIF connector (connecting the LCD screen to the motherboard) with the tweezers.

⚠ Ribbon wires can be easily damaged.






## Step 7 — Lens

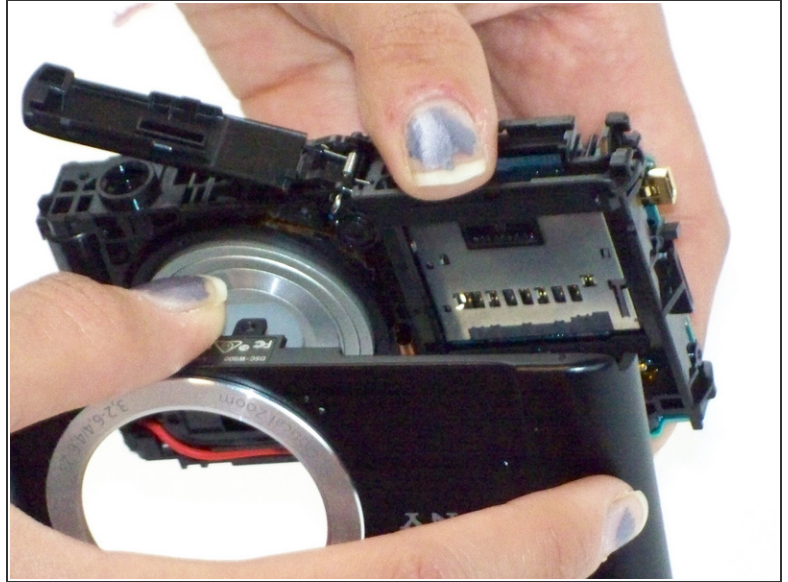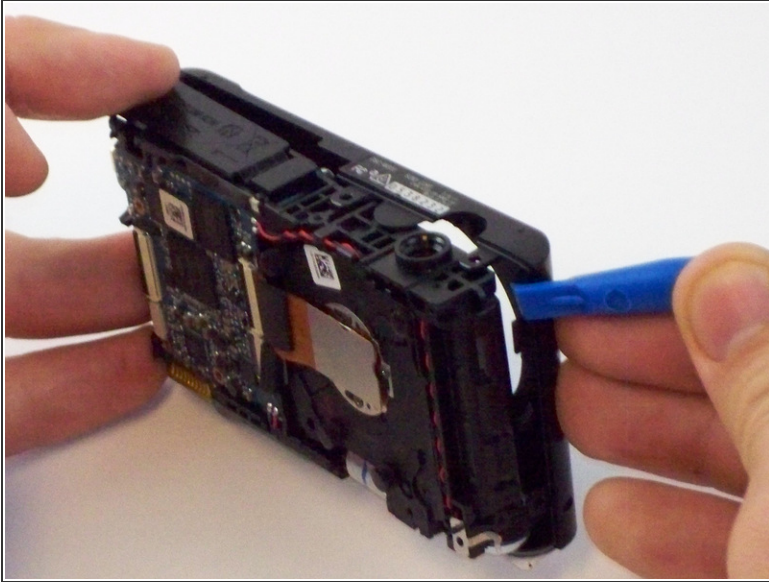

- With plastic opening tool, gently pry loose the front panel.
- Separate front panel from the camera housing.


## Step 8

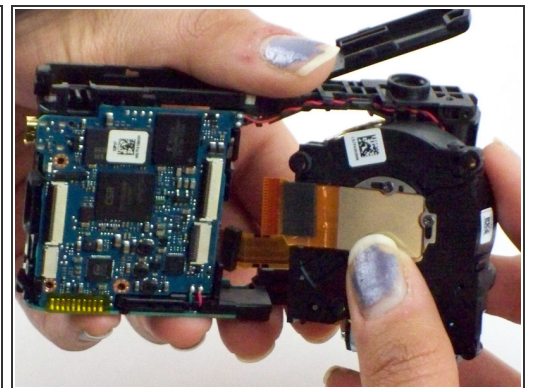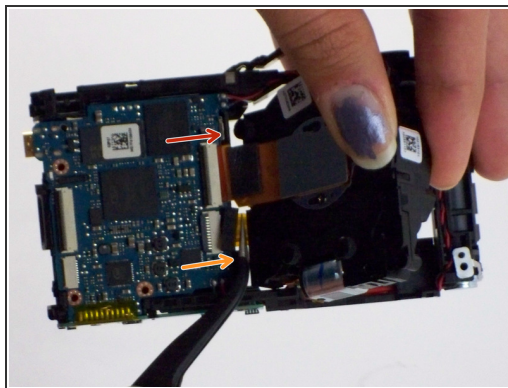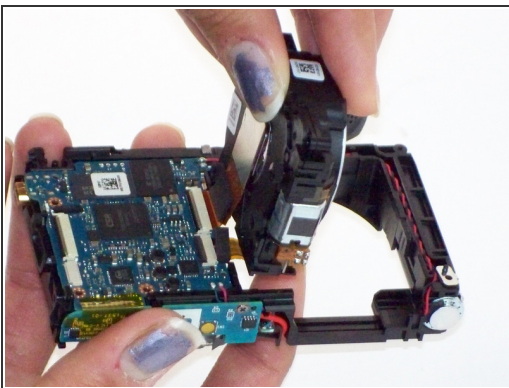

- Remove the lens housing by pushing it, from the front, through the housing and lifting it out.
- Gently pull on the large ribbon wire (connecting the Lens housing to the motherboard via ZIF connector) with the tweezers.
- Gently pull on the small ribbon wire (connecting the Lens housing to the motherboard) with the tweezers.


 Be careful not to damage either of the ribbon wires.

## Step 9 — Motherboard

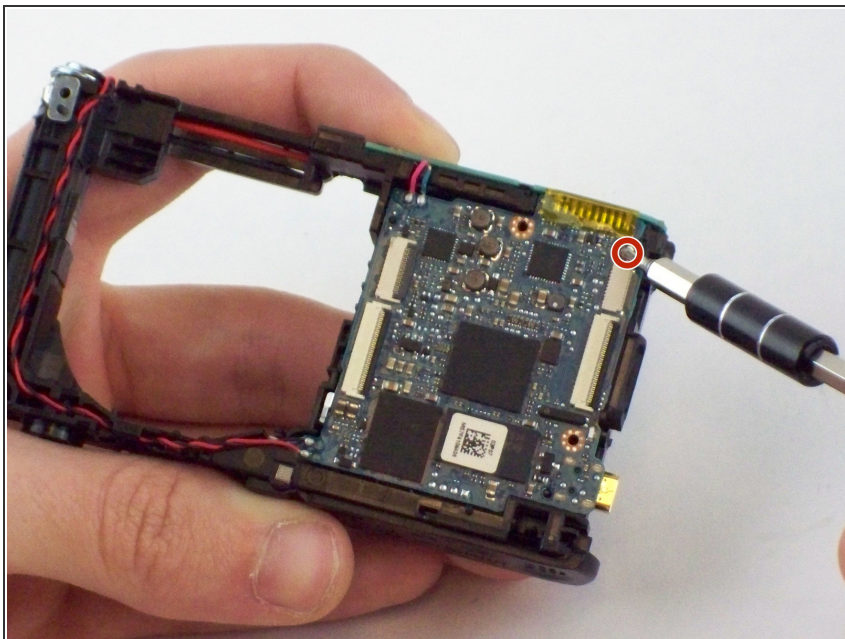

- Remove the single 3.75 mm Phillips #000 screw from the base of the motherboard.


## Step 10

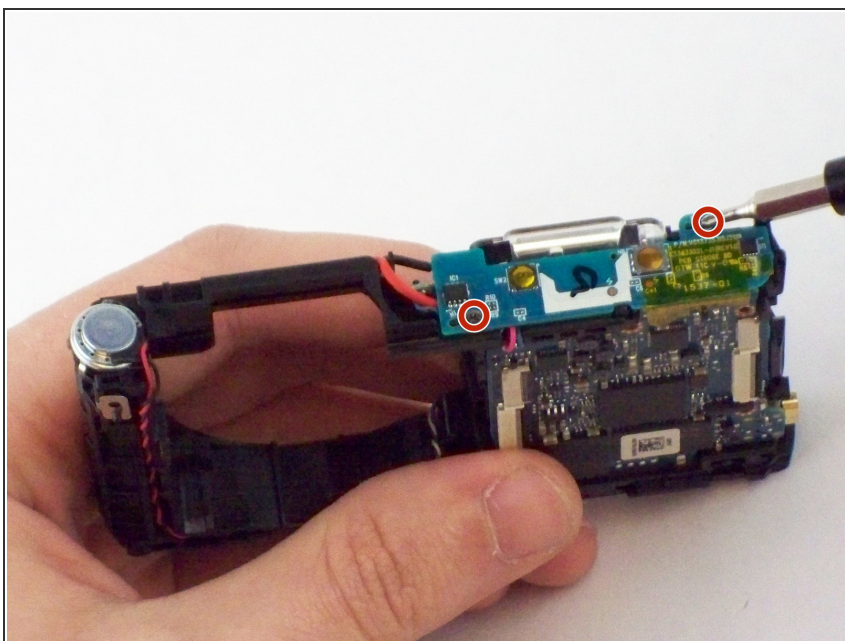

- Remove the two 3.5 mm Phillips #000 screws from the secondary board that is attached to the flash bulb.




## Step 11

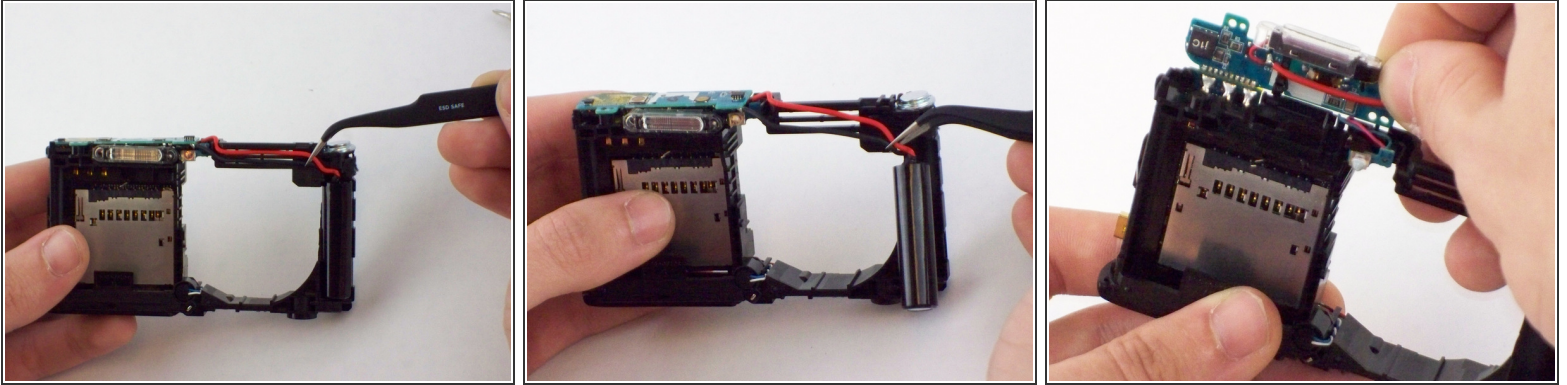

- Use the tweezers. Move the thick red cable, attached to the secondary board, outside of its place in the camera housing.
- Gently pull on the red/black wire in order to free the photo lens cylinder from the housing.
- Remove the secondary board from its position and move it upward, out of the way.

⚠ From this point on, do not damage the connection between the motherboard and the secondary board.


## Step 12

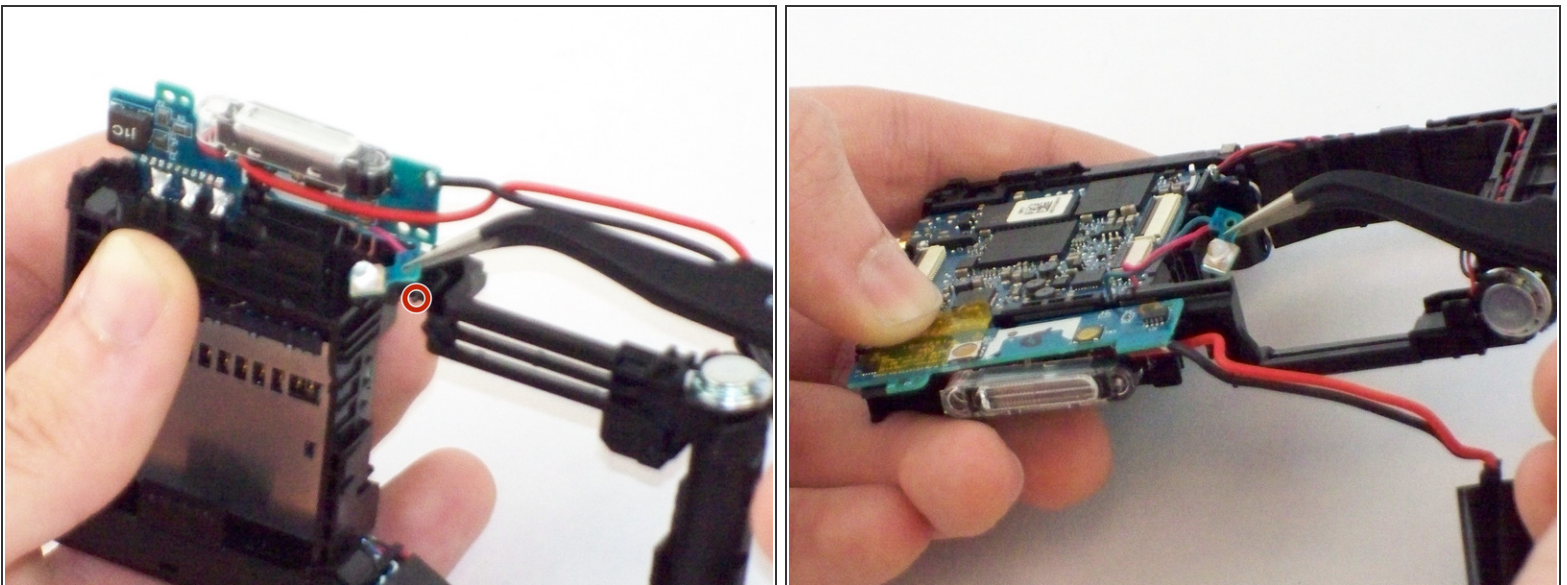

- Using the tweezers, pull the indicator bulb out , freeing it from its position on the housing.
- Thread the indicator bulb under and through the secondary boards position.




## Step 13

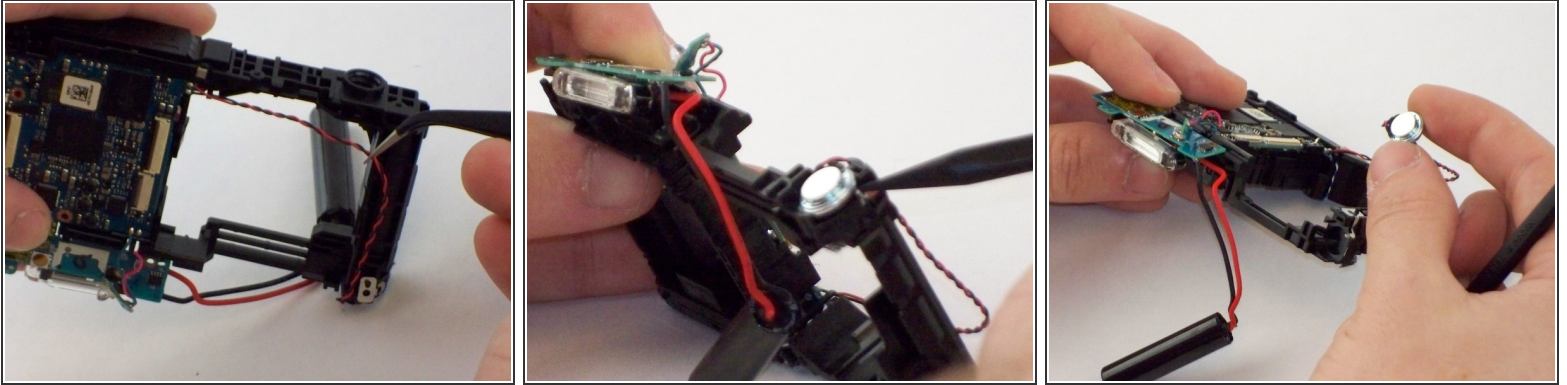


- Using the tweezers, remove the black/red speaker wire from camera housing.
- Pry loose and remove the speaker from the camera housing.
- ⓘ The speaker is attached with adhesive and must be removed with the spudger and moderate force.

## Step 14

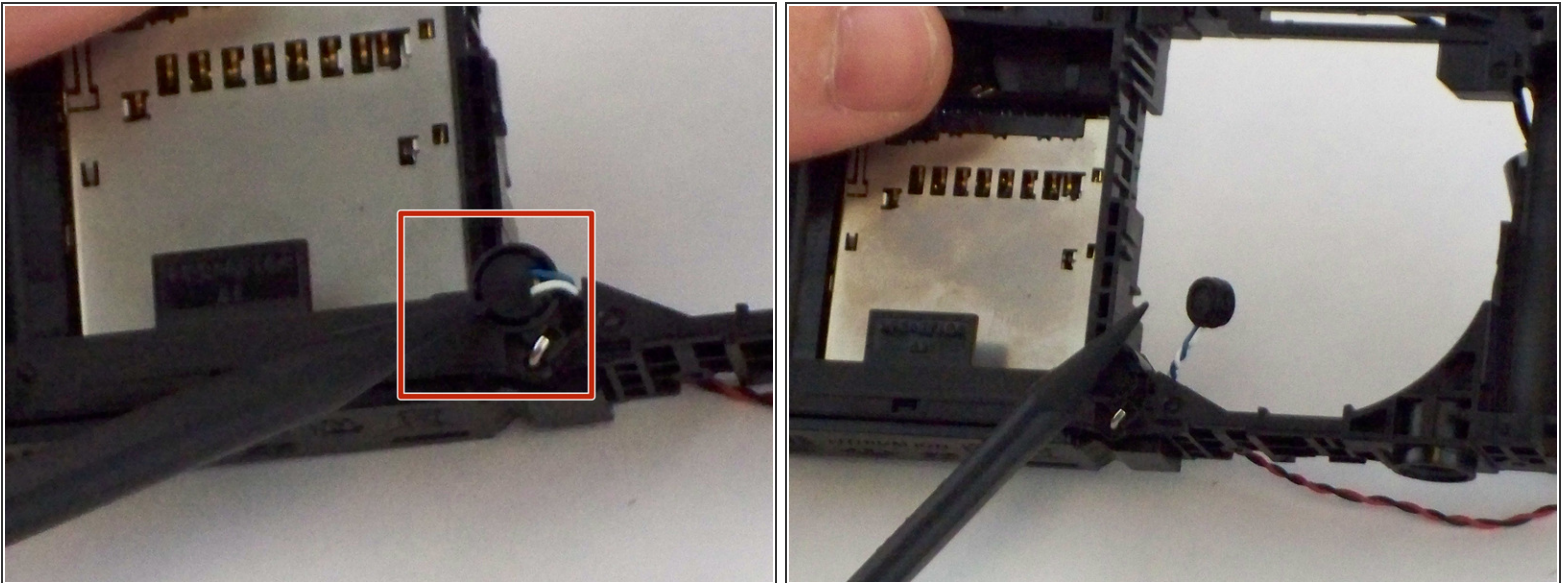

- Using the spudger, remove the mini speaker from the housing.


## Step 15

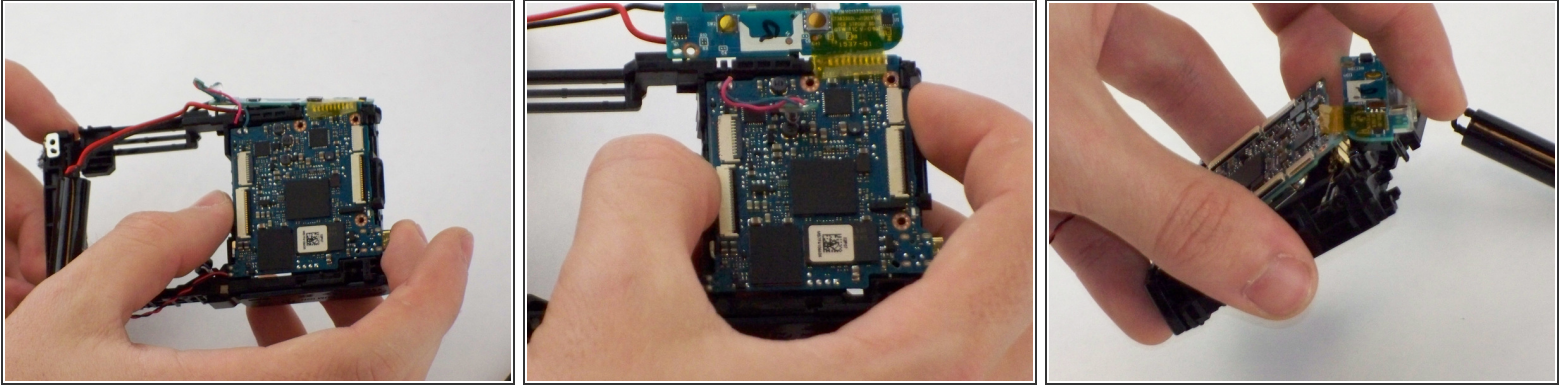

- Pull up on the bottom-half of the motherboard, slightly removing it from its position in the housing.
- With enough force, pull up on the top right of the motherboard, pulling it entirely from its position in the housing.

⚠ Once again, be sure to keep the motherboard and secondary board connection intact.

## Step 16

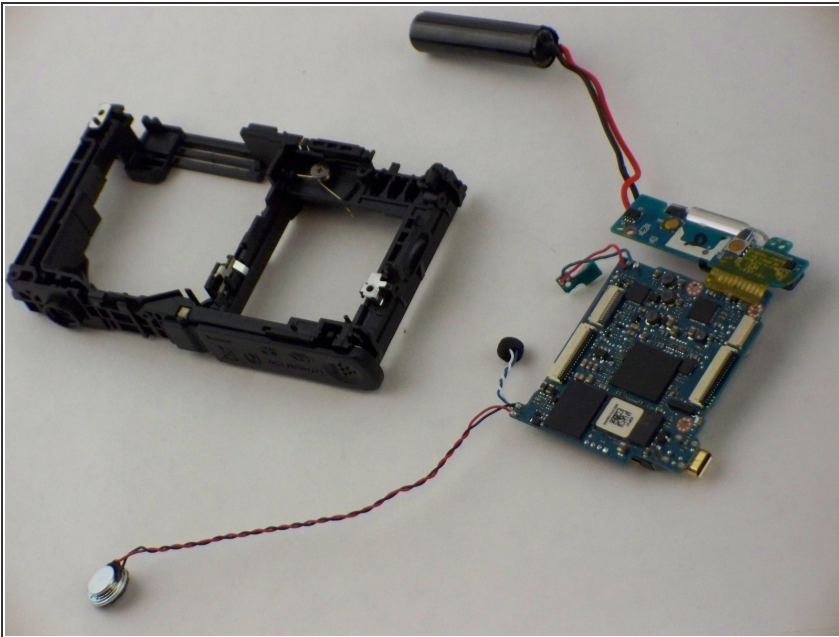

- Once apart, completely separate motherboard from the housing.

To reassemble your device, follow these instructions in reverse order.



